





Tel +44 (0)161 877 1419  
 Fax +44 (0)161 877 7086  
 Email office@dtafast.co.uk

WIRING SCHEMATIC

FOR  
 E48EXP  
 E48EXP IGNITION ONLY

LAST UPDATED 30/03/2001

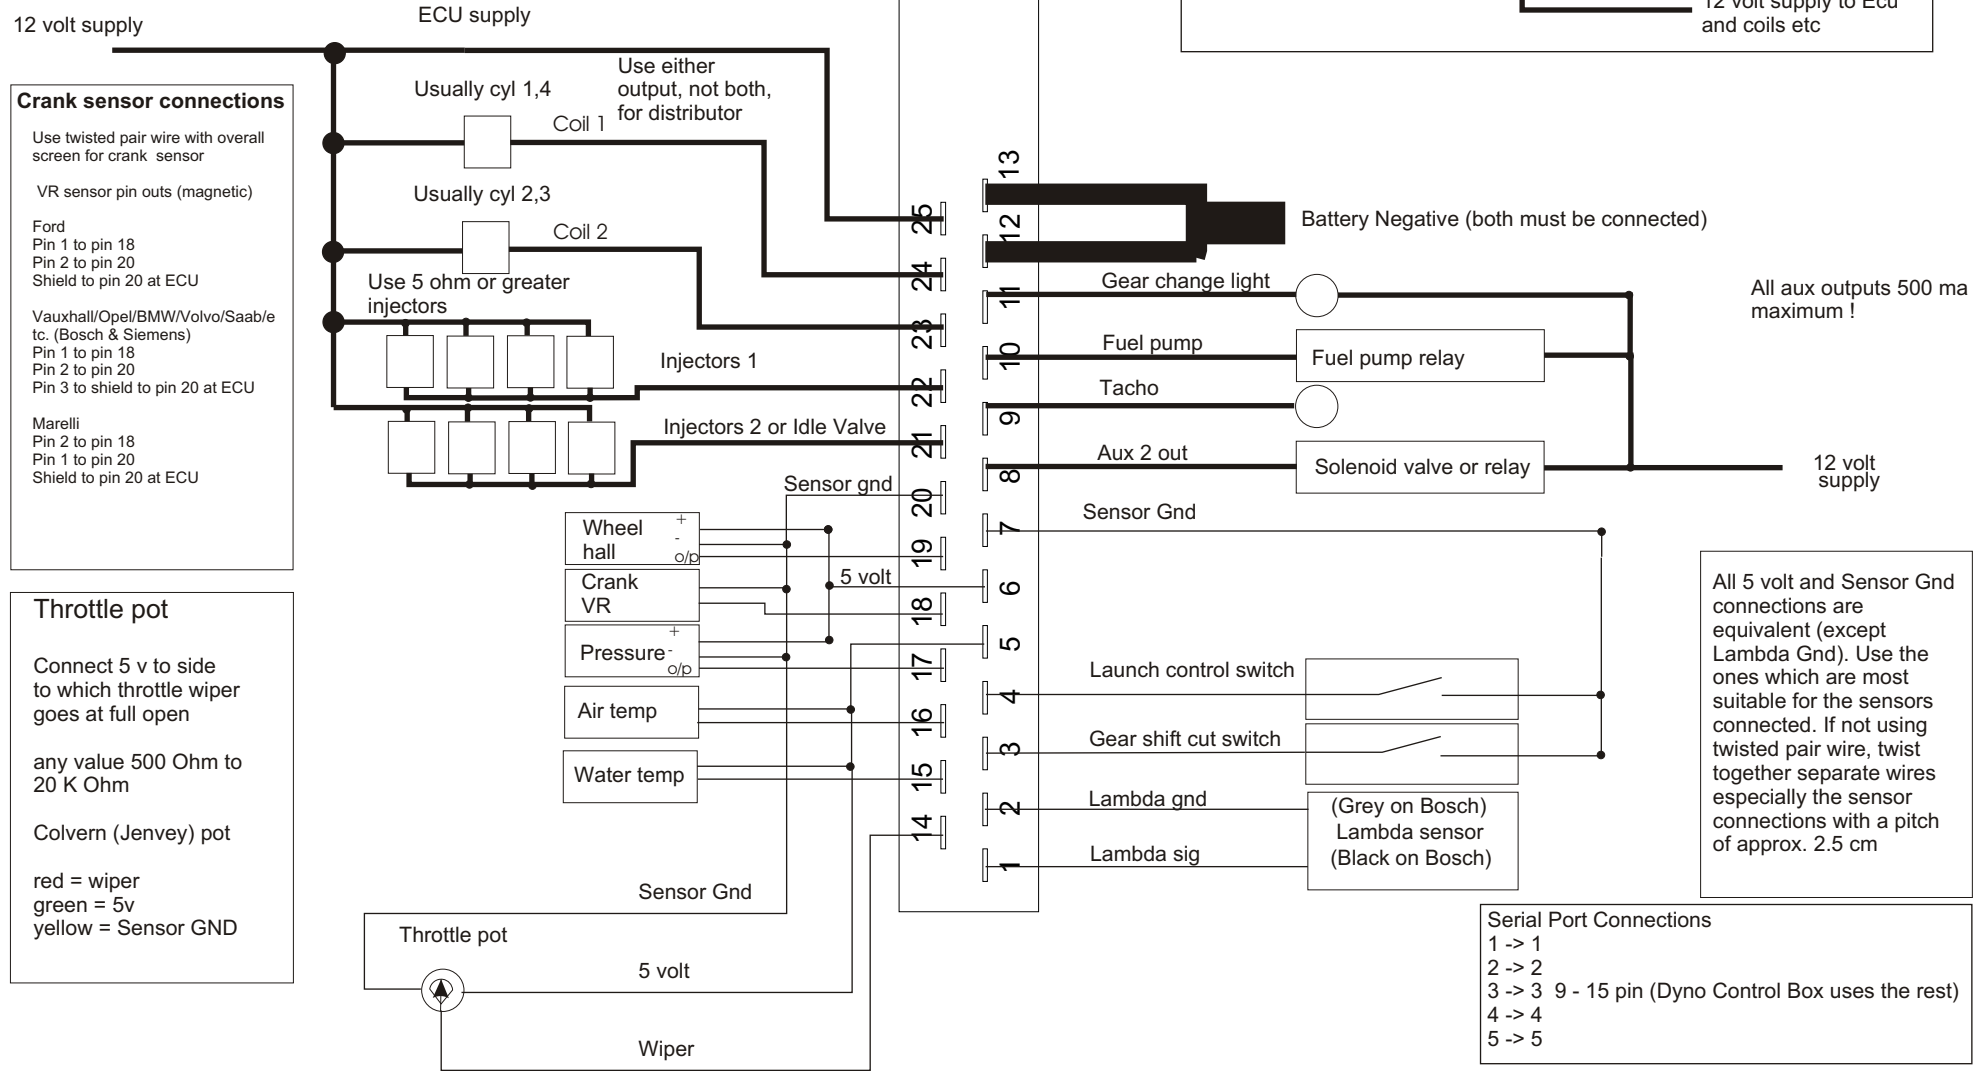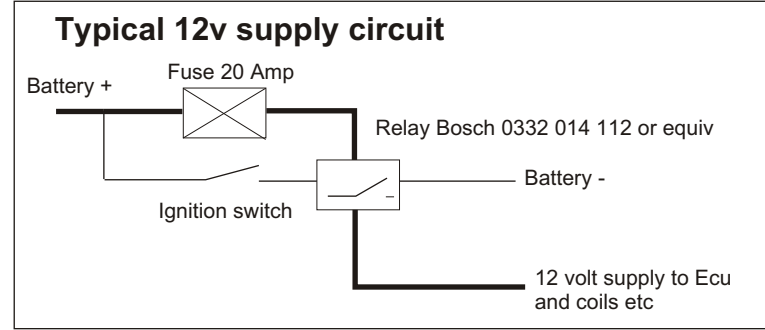

**Serial Port Connections**

- 1 -> 1
- 2 -> 2
- 3 -> 3
- 9 - 15 pin (Dyno Control Box uses the rest)
- 4 -> 4
- 5 -> 5